A new benchmark for Professional Workspace seating

The Desky Pivot Ergonomic Office Task Chair eliminates common workplace frustrations like mid-back fatigue, localized thigh strain, and shifting, unrated components by providing a fully adjustable, orthopedically sound structural foundation.




3 Tilt Settings



Adjustable Lumbar Support



4D Adjustable Armrests

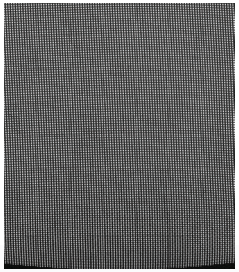

Breathable 3D Mesh Fabric

DESKY

PIVOT CHAIR




ASSEMBLY INSTRUCTIONS & FEATURES

PARTS

A BACK REST QTY 1 	**B** CHAIR BASE QTY 1 	**C** SEAT QTY 1 	**D** GAS CYLINDER QTY 1 
E CASTERS QTY 5 	**F** ARM REST QTY 2 	**G** HEAD REST QTY 1  *OPTIONAL	**H** M8x30 SCREW QTY 7 
I SPRING WASHER QTY 7 	**J** WASHER QTY 7 	**K** M6x25 SCREW QTY 1 	**L** HEAD REST BRACKET QTY 1 
M HEX KEY QTY 1 	**N** SCREWDRIVER QTY 1 		


ASSEMBLY GUIDE

STEP 1

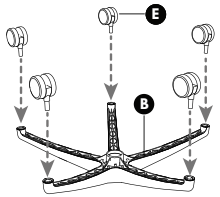

Insert the 5 casters into the chair base.


STEP 2

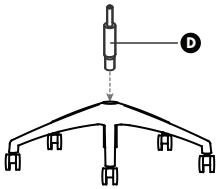


Insert the gas cylinder into the chair base, ensuring the thinner section faces away from the caster wheels.

STEP 3

Position the back rest and align the holes with the holes on the chair. Tighten using the screws provided.

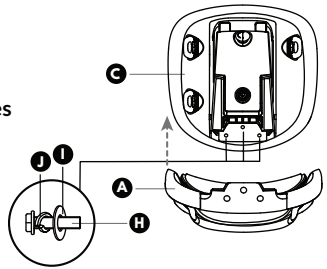


STEP 4

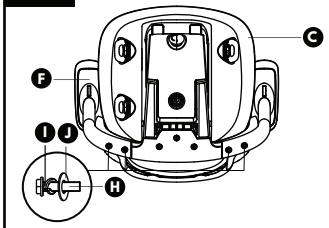

Attach the chair set and the back rest with arm rests using the screws.


STEP 5 *OPTIONAL: FOR THOSE WITH HEAD REST

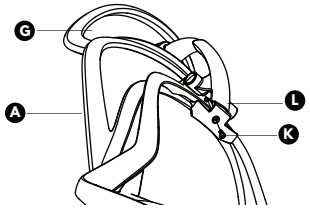


Attach the headrest onto the backrest using the bracket provided.

STEP 5

Insert the tip of the gas cylinder into the underside of the main body of the chair. Sit on the chair to firmly engage the cylinder.

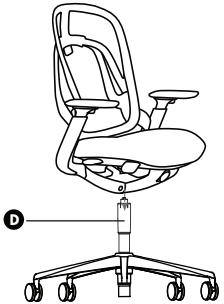

PNEUMATIC HEIGHT ADJUSTMENT

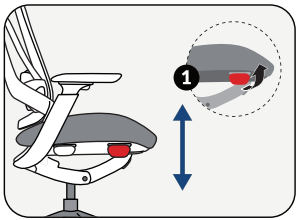


Pneumatic Height Adjustment is used to adjust the seat to fit different user heights.

To raise the seat:
Lift your weight slightly and pull the lever up. (1)

To lower the seat:
Stay seated and pull the lever up. (1)

BACK TILT LOCK

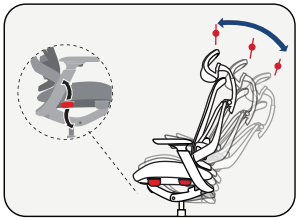


Recline to your preferred angle (choose from 3 positions).

Pull the lever out to lock the backrest in place.

Push the lever in and lean back slightly to release the lock.

TENSION ADJUSTMENT

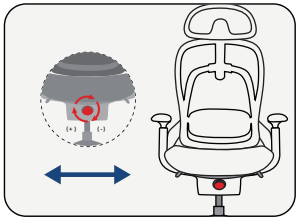


To Extend:
Pull the lever outward from the underside of the seat.

To Tighten:
Rotate clockwise to increase backrest resistance.

To Loosen:
Rotate counterclockwise to increase backrest resistance.

ARMREST MOVEMENT

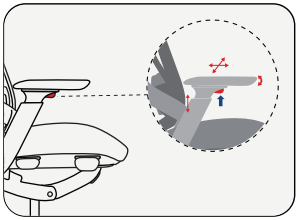


Height Adjustment:
While seated, press the button and grasp the armrest to raise or lower to desired height. Release the button to lock.

Forward & Backward:
Grasp the arm pad and slide it forward or backward to adjust depth.

Width (Left & Right):
Hold the armrest pad and slide it inward or outward to adjust the width.


Swivel (Pivot):
Hold the armrest pad and pivot it left or right to your preferred angle.

SEAT DEPTH

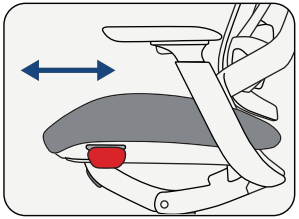

Pull the lever out and slide the seat pan forward or backward to your desired position. Release the lever to lock the seat in place.

HEADREST MOVEMENT

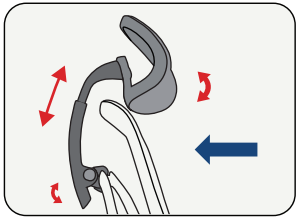

Height Adjustment (Ratchet Mechanism):
To raise the headrest, pull it upward one click at a time. To lower, pull the headrest all the way up to its highest point to release the lock; it will then slide back down to the lowest starting position.

Angle Adjustment:
Grasp the headrest cushion and pivot it forward or backward to find your preferred neck support angle.