
DESKY® SILHOUTTE CORDLESS LAMP SAFETY & OPERATING INSTRUCTIONS


ON/OFF

Brightness memory is maintained. Every time the lamp is switch on, the lighting brightness will be the same as the previous setting.

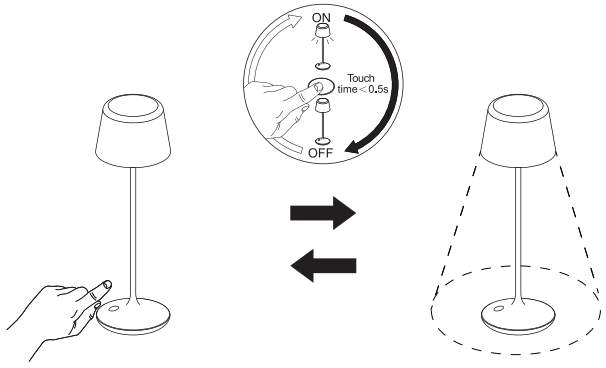


STEPLESS DIMMER

⚠ ONLY WORKS WHEN THE LIGHT IS ON

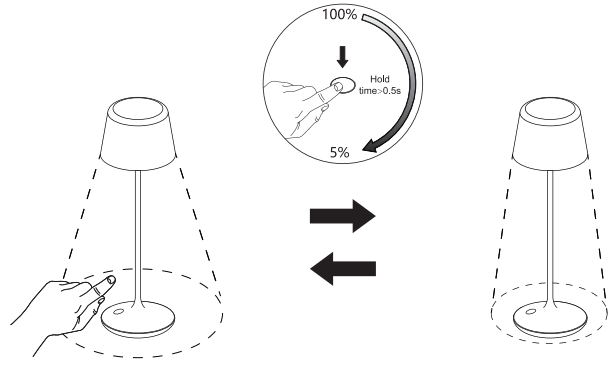


CANCELLING SETTINGS

If there is no operation within 10 seconds, the lamp will automatically quit from the colour temperature switching mode.

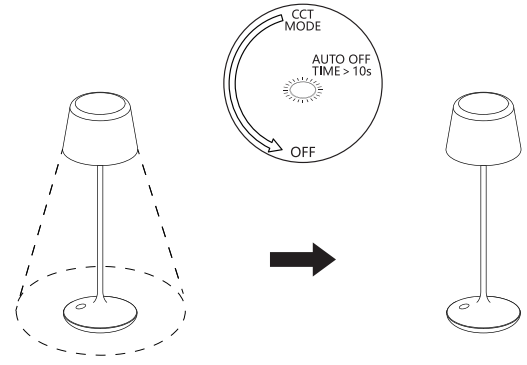

CCT SWITCH ADJUSTMENTS

⚠ ONLY WORKS WHEN THE LIGHT IS ON

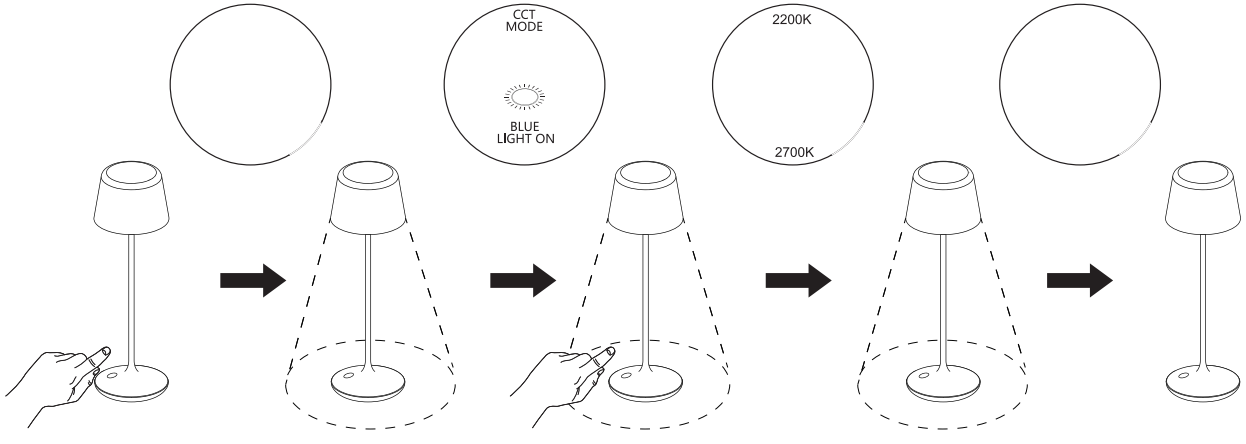


To change colour temp, hold the switch down for a total of 4 seconds.

Once held, a blue light will show indicating you're in CCT mode.


Press for 0.5s to cycle through colour temperature.

Hold for 4 seconds to exit the adjustment mode.

CHARGING

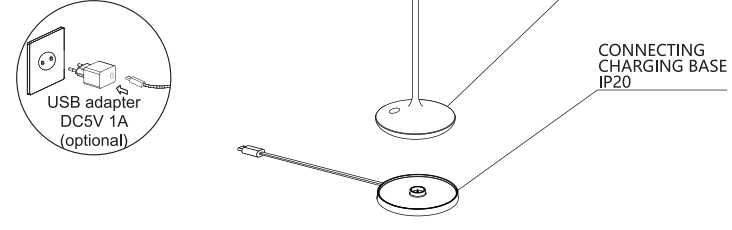

⚠ WHEN CHARGING, LIGHT WILL BE ORANGE

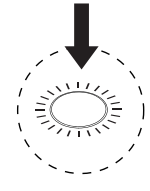

⚠ WHEN FULLY CHARGED LIGHT WILL BE GREEN

