





DESKY® SCREEN SHELF SMALL INSTRUCTION MANUAL

PARTS

A **BACK BRACKET** QTY1 	**B** **TOP PLATE** QTY1 	**C** QTY2 	**D** QTY1 
E QTY4 	**F** QTY4 	**G** **WASHER** QTY4 	**H** **SPACER** QTY4 

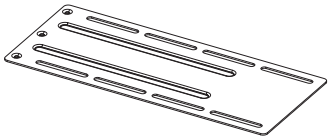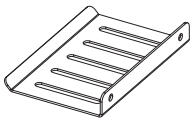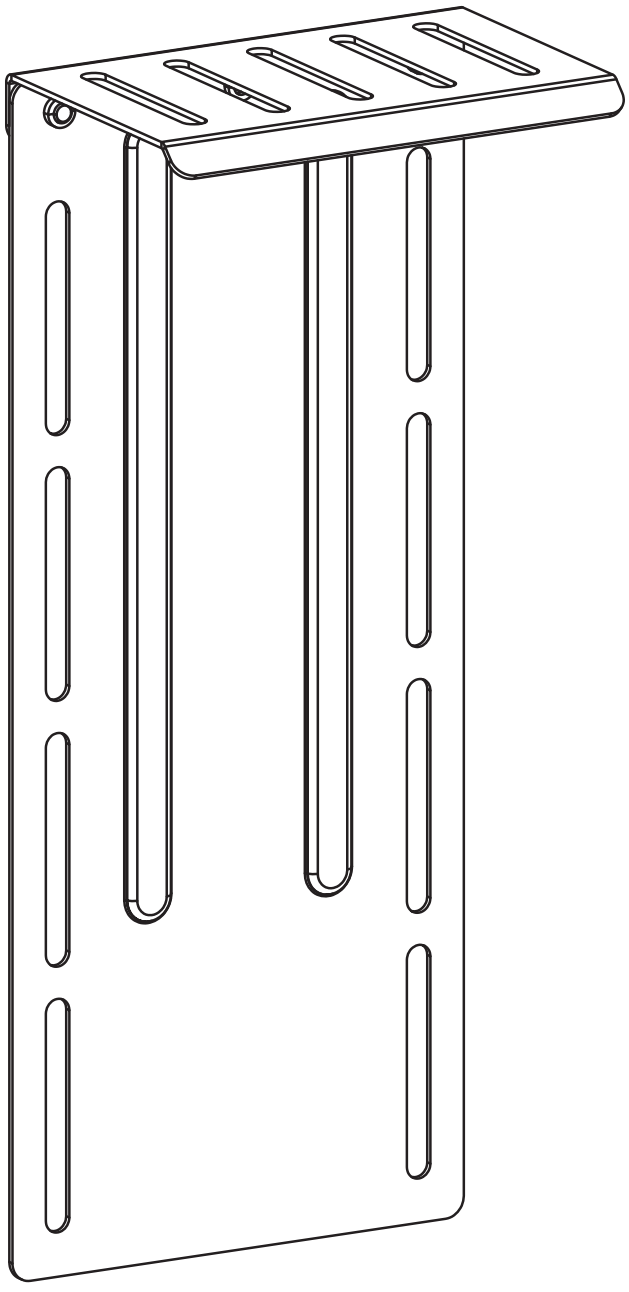



2kg (4.4lbs) RATED

VESA 100x100

DESKY® SCREEN SHELF SMALL INSTRUCTION MANUAL


STEP 1

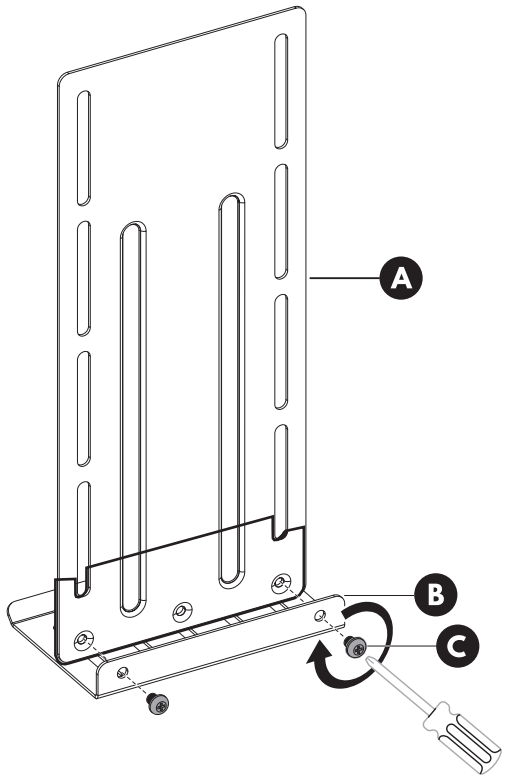


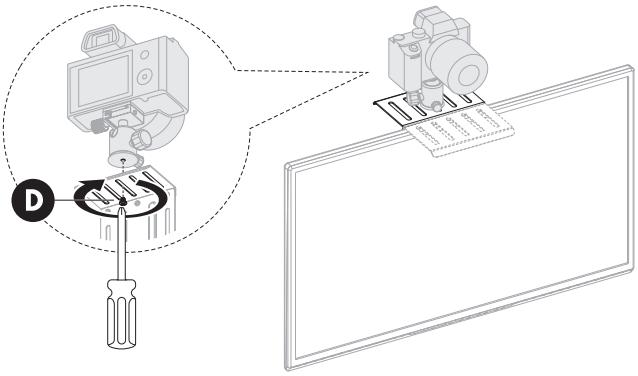

STEP 2






Forward or Backward Orientation




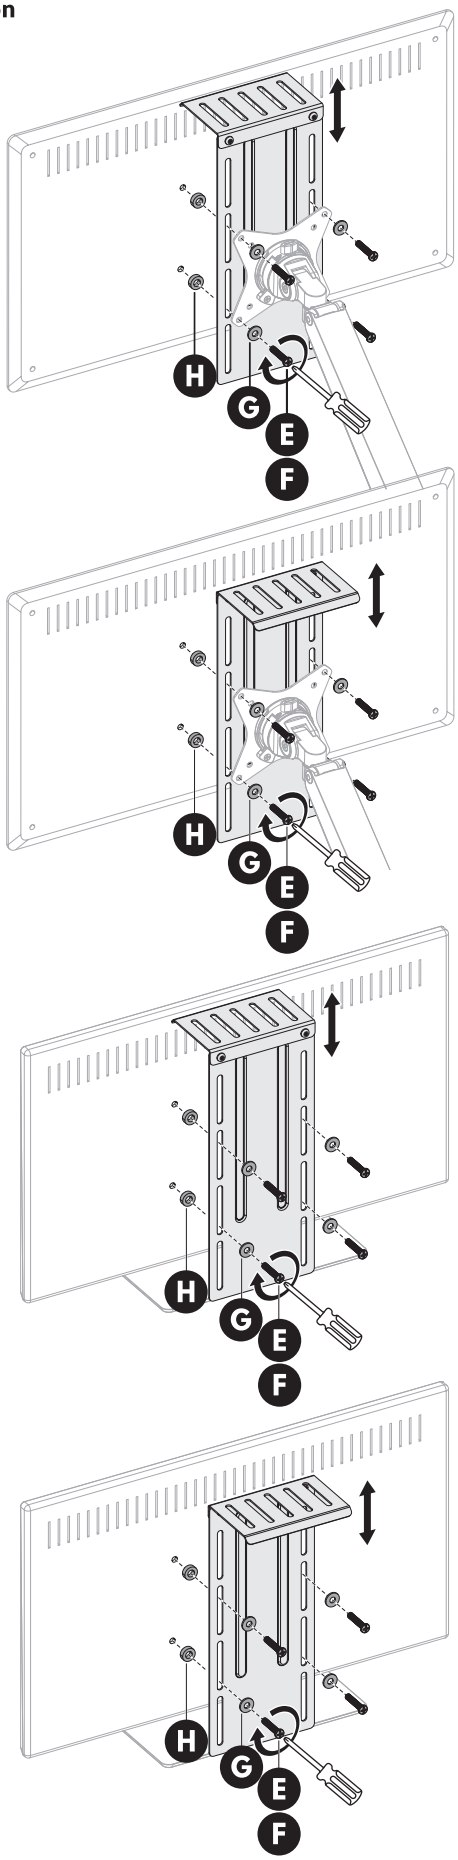

DESKY® SCREEN SHELF MEDIUM INSTRUCTION MANUAL

PARTS

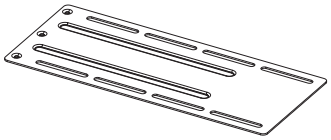A **BACK BRACKET** QTY1 	**B** **TOP PLATE** QTY1 	**C** QTY3 	**D** QTY2 
E QTY4 	**F** QTY4 	**G** **WASHER** QTY4 	**H** **SPACER** QTY4 

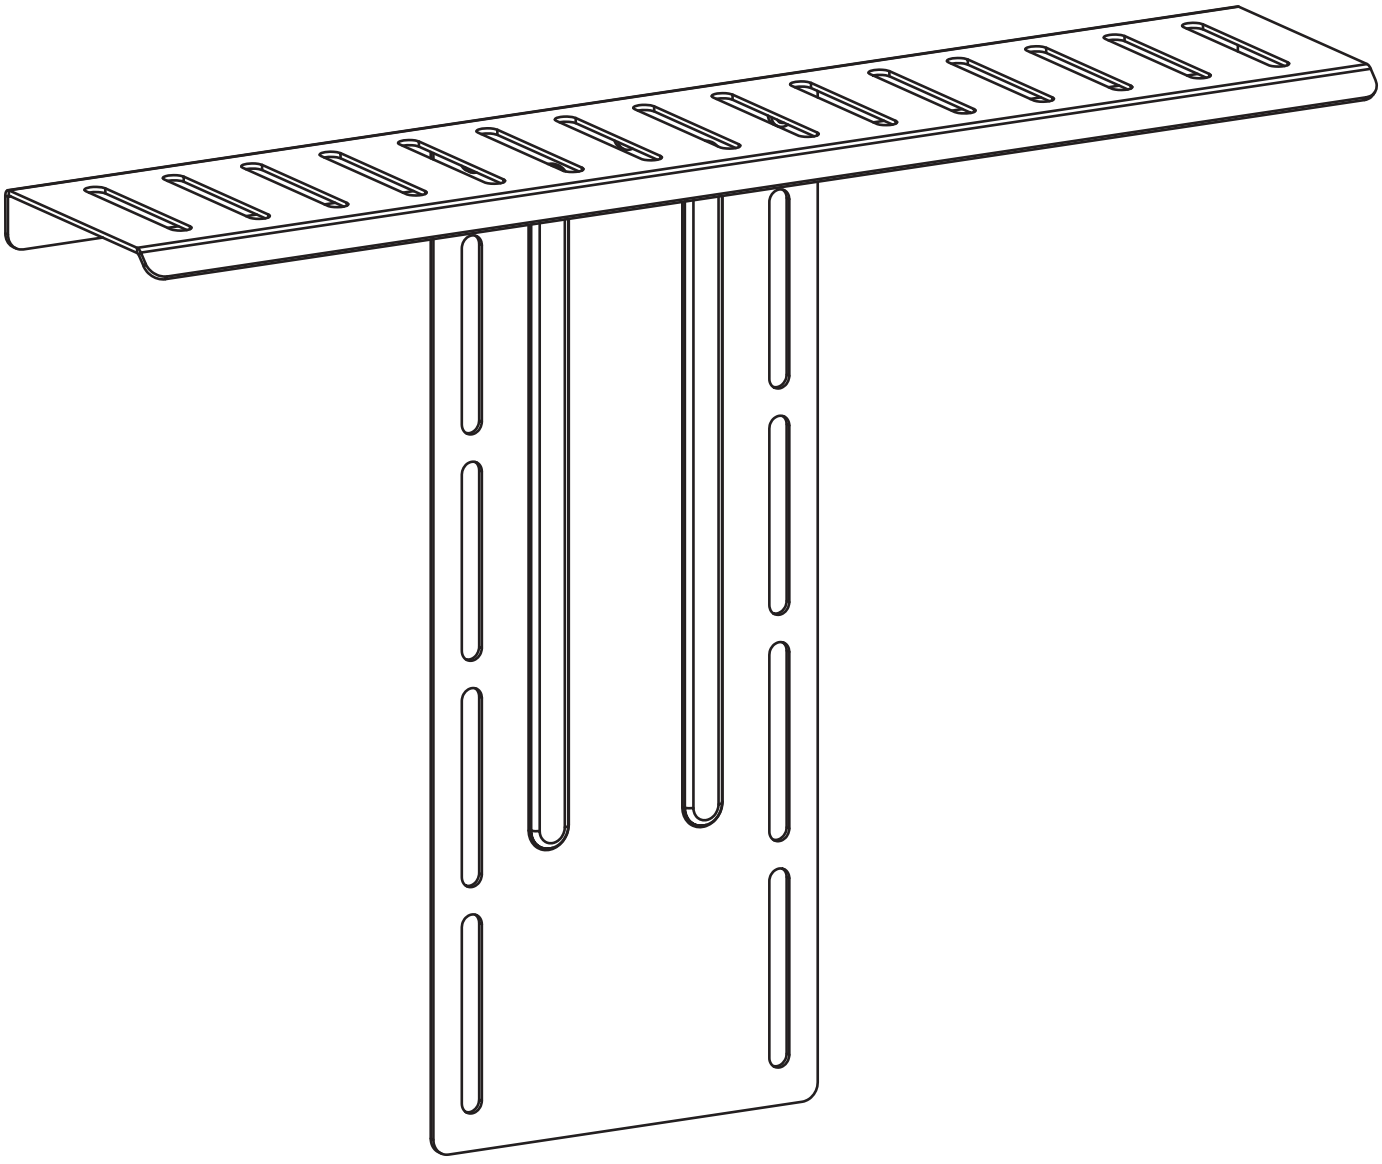







100x100


DESKY® SCREEN SHELF MEDIUM INSTRUCTION MANUAL

STEP 1

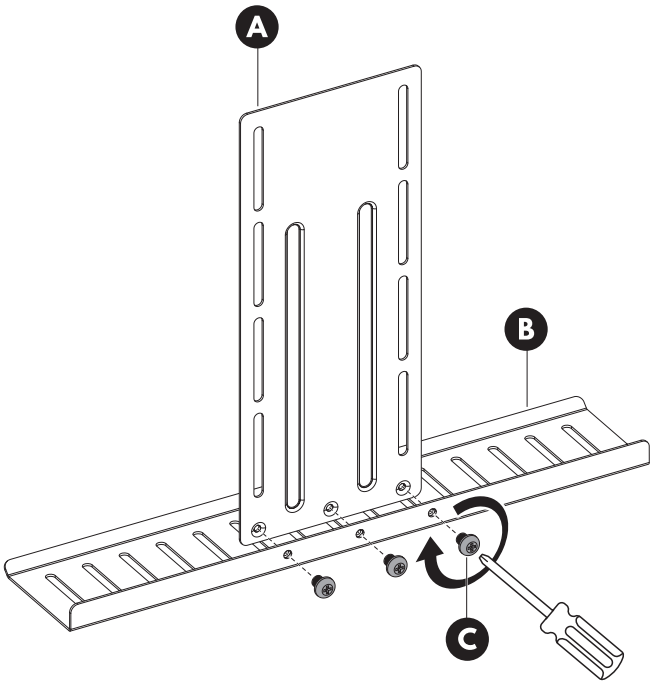


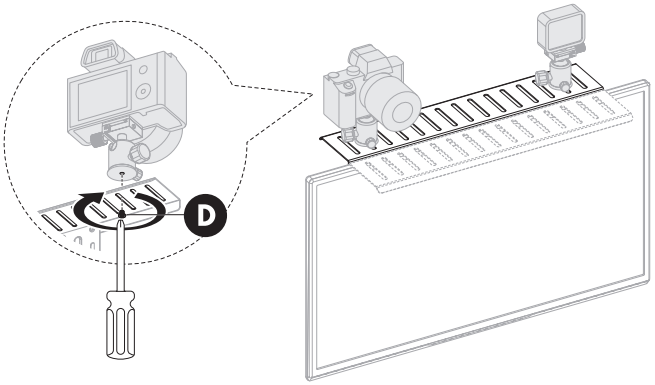

STEP 2








Forward or Backward Orientation

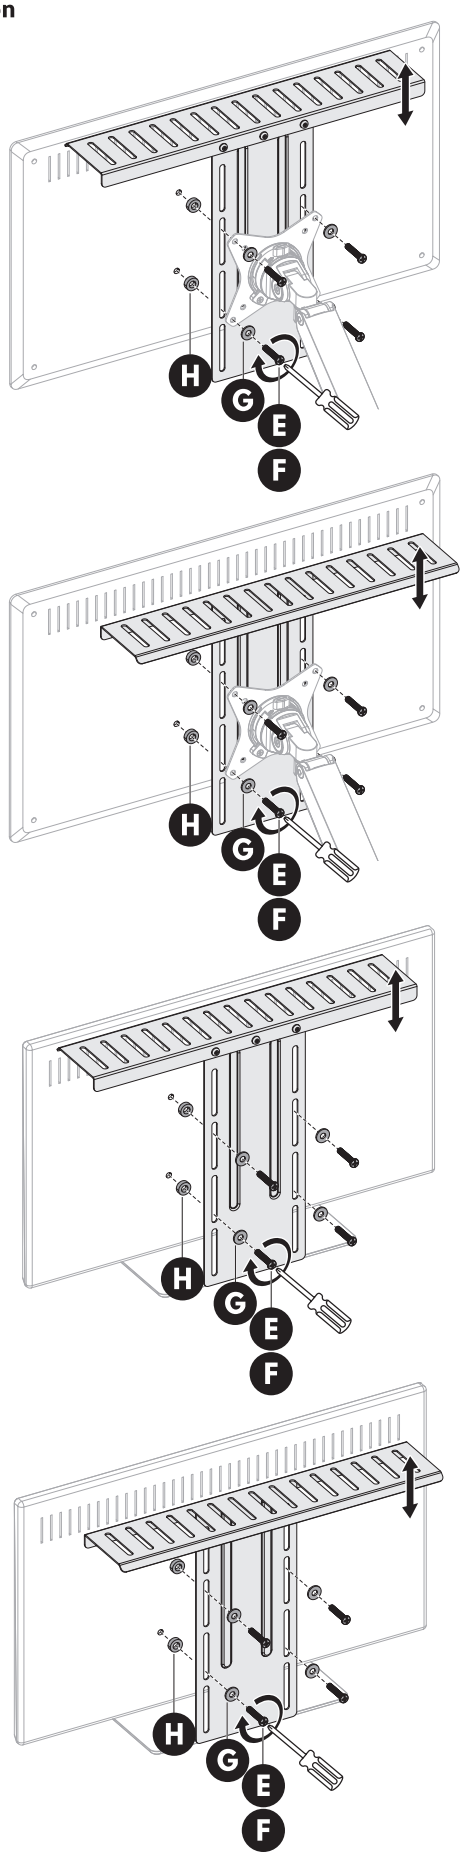

DESKY® SCREEN SHELF LARGE INSTRUCTION MANUAL


PARTS

A BACK BRACKET QTY1 	**B** EXTENSION PLATE QTY2 	**C** TOP PLATE QTY1 	**D** QTY3 	**E** QTY3 	**F** QTY1 	**G** QTY4 
H QTY4 	**I** ALLEN KEY QTY1 	**J** SPANNER QTY1 	**K** QTY4 	**L** QTY4 	**M** WASHER QTY4 	**N** SPACER QTY4 

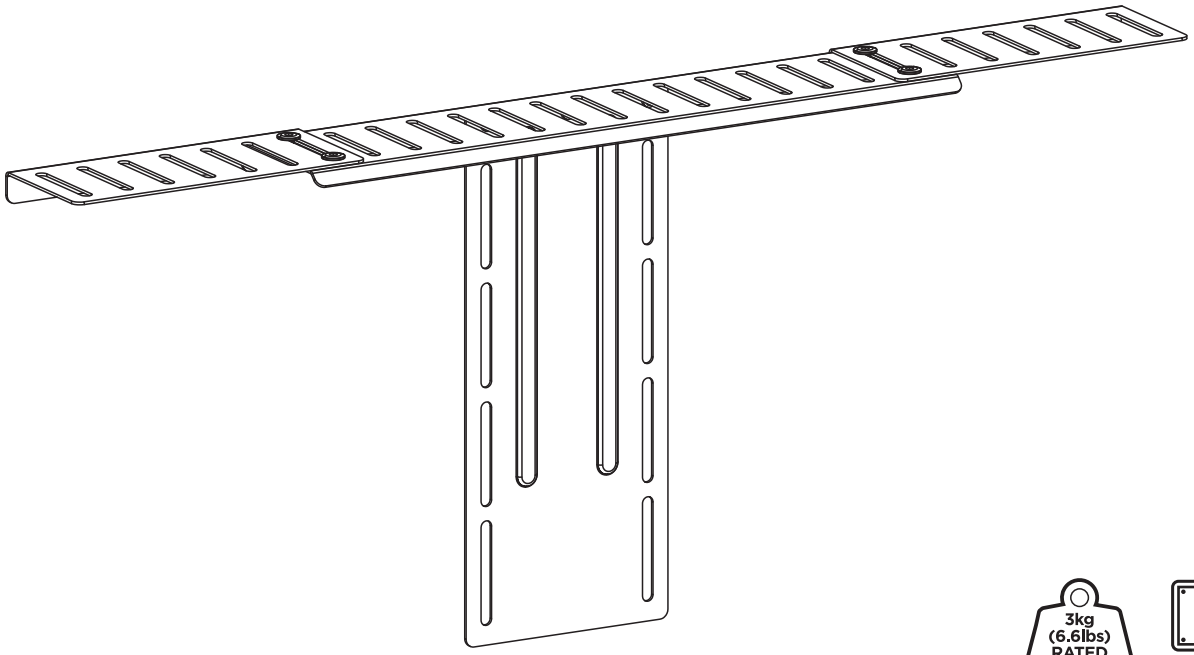




STEP 1

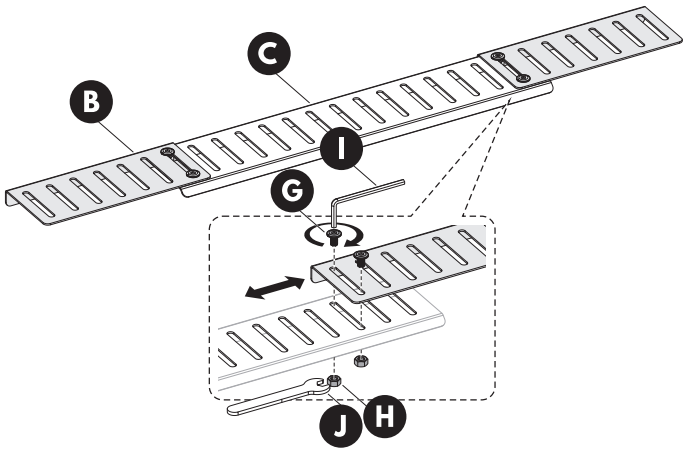


STEP 2

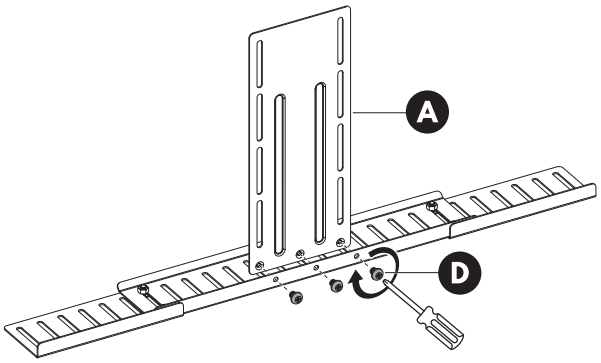



DESKY® SCREEN SHELF LARGE INSTRUCTION MANUAL

STEP 3

Forward or Backward Orientation



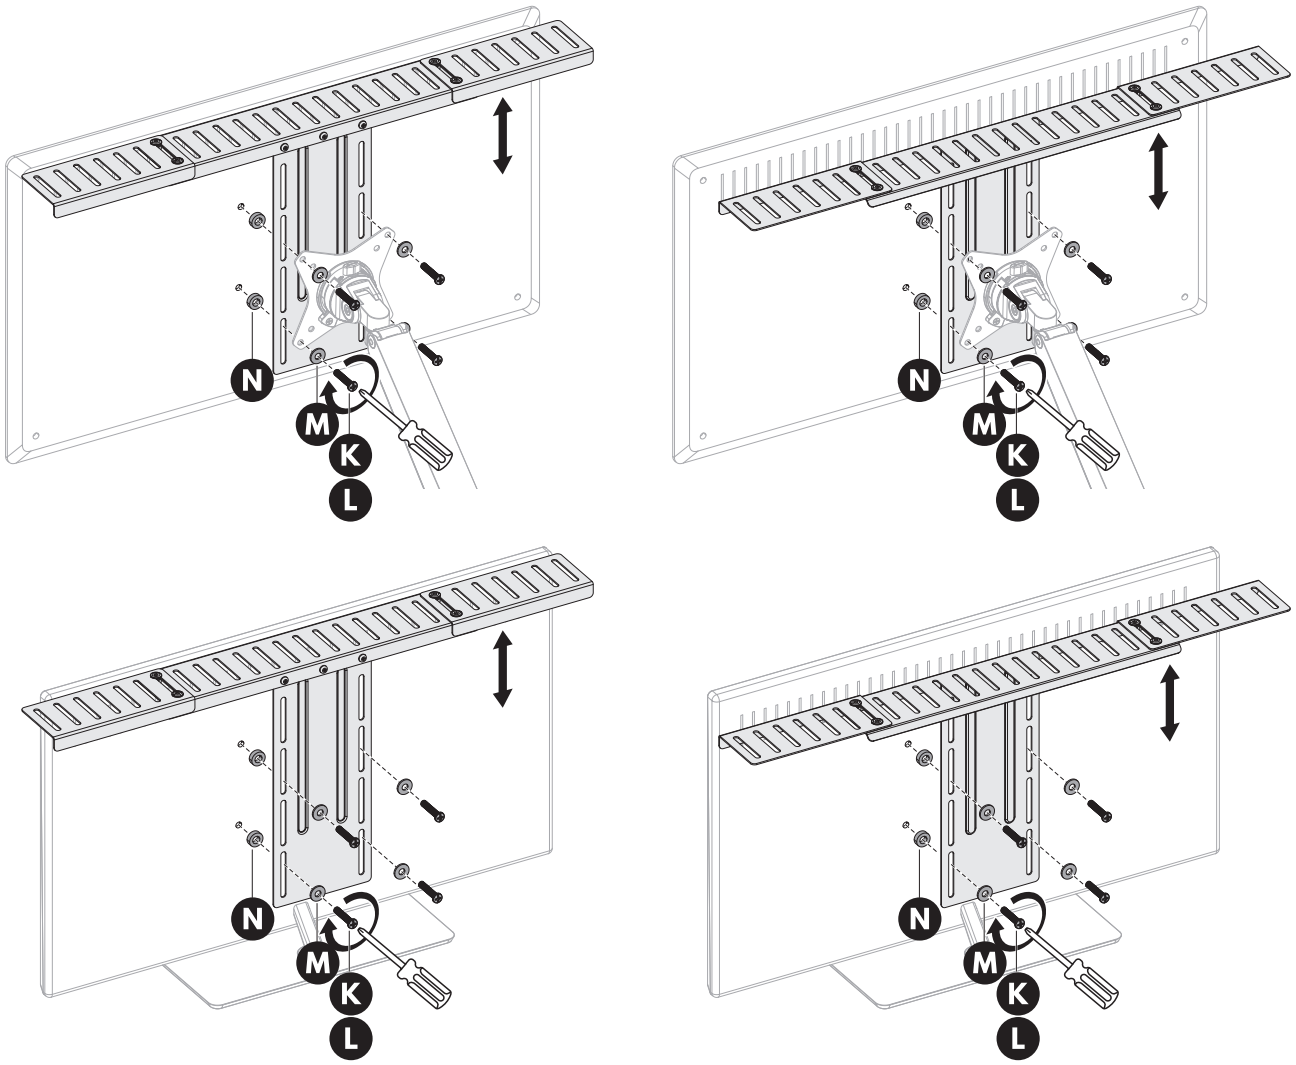

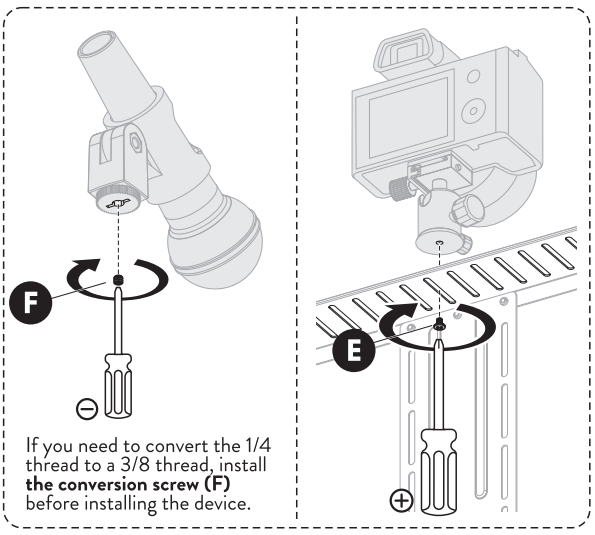

If you need to convert the 1/4 thread to a 3/8 thread, install **the conversion screw (F)** before installing the device.

