
















DESKY®

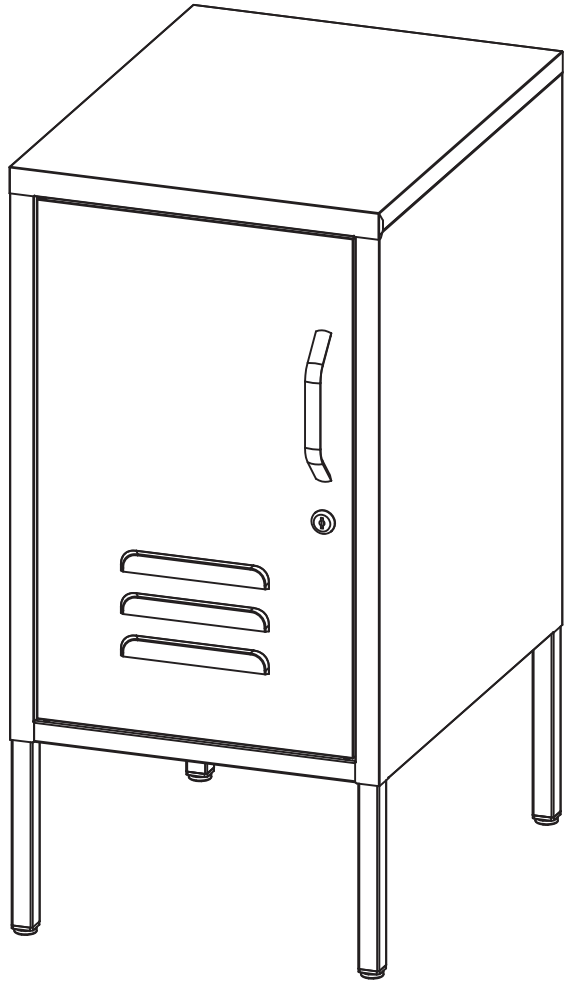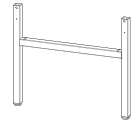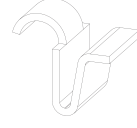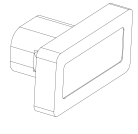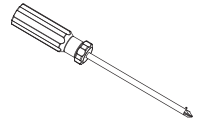


OSLO METAL LOCKER CABINET ASSEMBLY INSTRUCTIONS

PARTS

A **SIDE PANEL** QTY 1 	**B** **SIDE PANEL** QTY 1 	**C** **BACK PANEL** QTY 1 
D **DOOR** QTY 1 	**E** **TOP PANEL** QTY 1 	**F** **SHELVES** QTY 2 
G **BOTTOM PANEL** QTY 1 	**H** **LEGS** QTY 2 	**I** **DOOR POST** QTY 1 
J **SCREWS** QTY 14 	**K** **SHELF BRACKET** QTY 8 	**L** **LARGE WASHER** QTY 1 
M **ADJUSTABLE FEET** QTY 4 	**N** **SCREW WITH WASHER** QTY 2 	**O** **DOOR HANDLE** QTY 1 
P **MAGNET** QTY 2 	**Q** **DOOR BUMPER** QTY 1 	**R** **SCREWDRIVER** QTY 1 

STEP 1

Remove the hole plugs from both side panels.

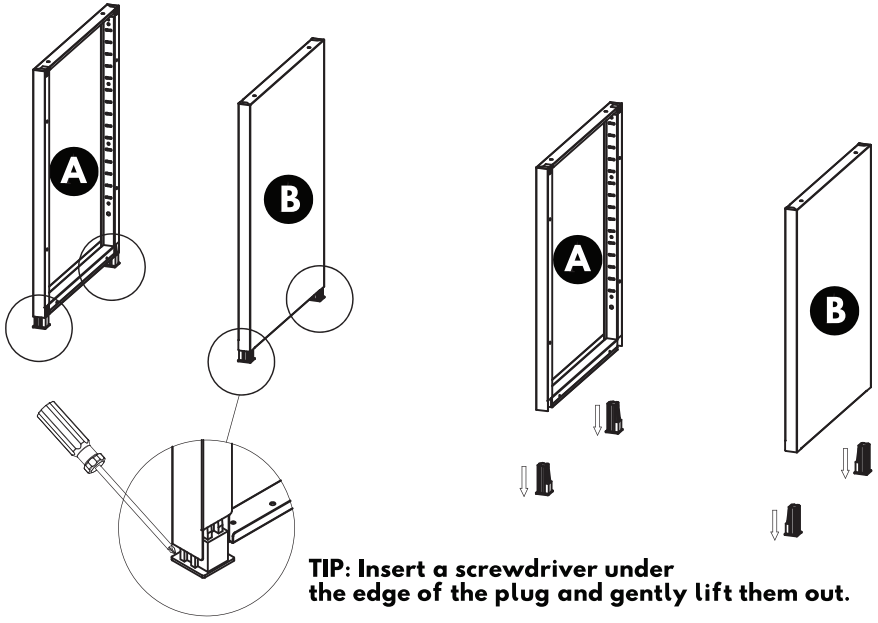


TIP: Insert a screwdriver under the edge of the plug and gently lift them out.

STEP 2


Screw the adjustable feet into the bottom of the legs.




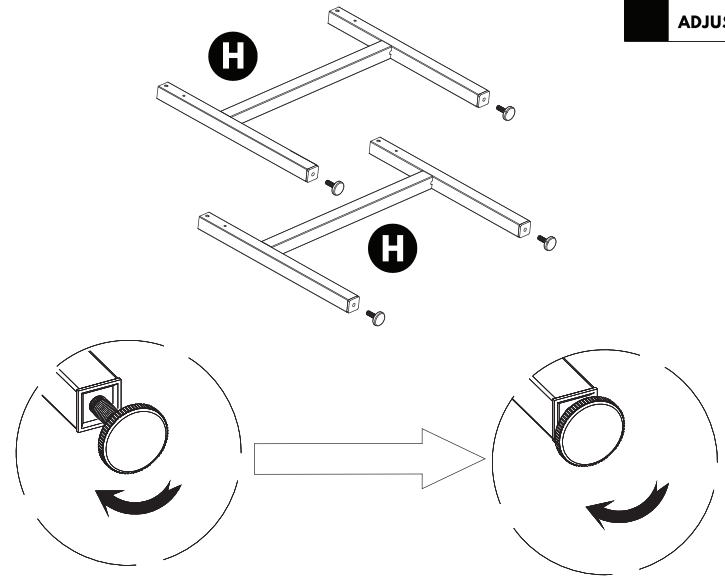

STEP 3


Place the side panels onto the legs and secure with screws.

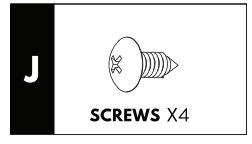


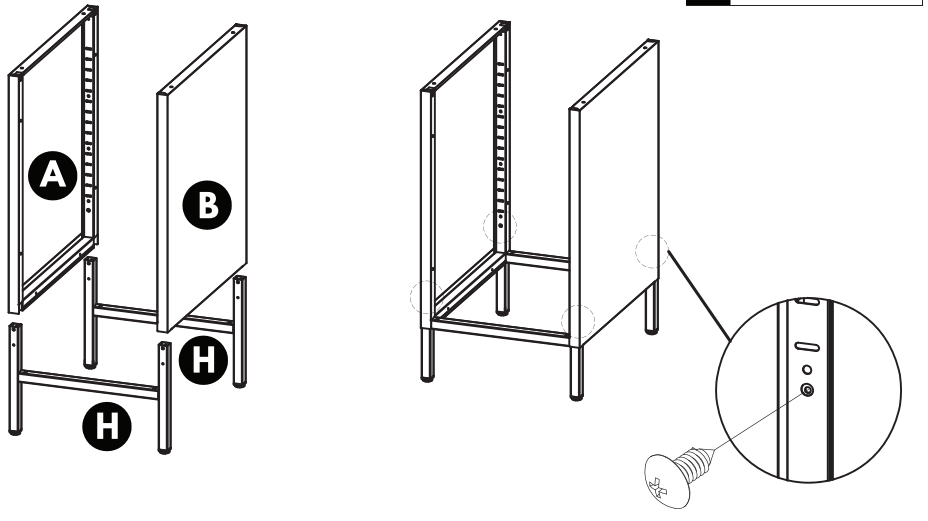

STEP 4

Align the back panel with the side panels and secure it with screws.

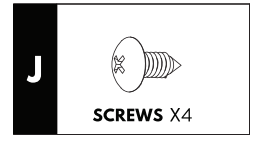


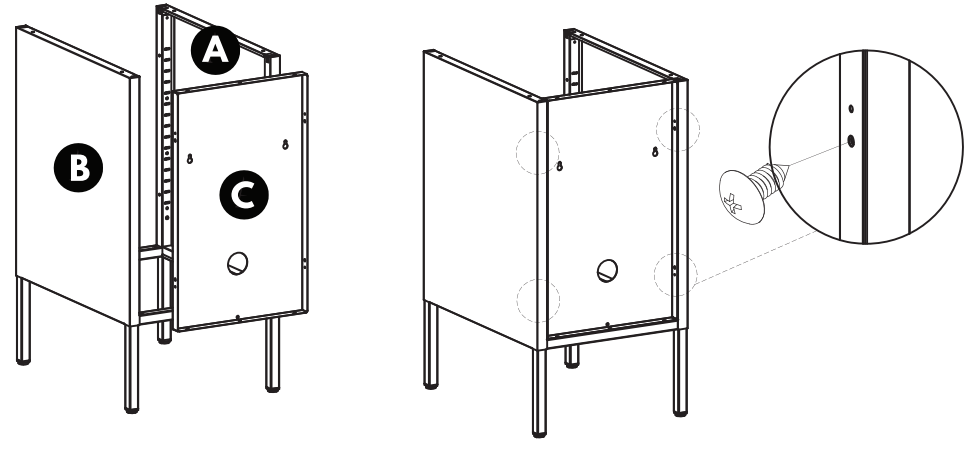


STEP 5

Slide the bottom panel into place.

J — SCREWS X1

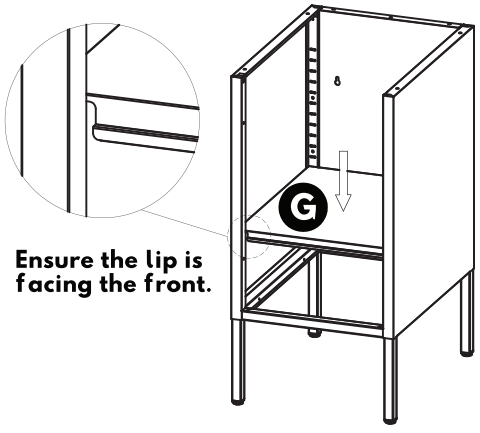

Ensure the lip is facing the front.

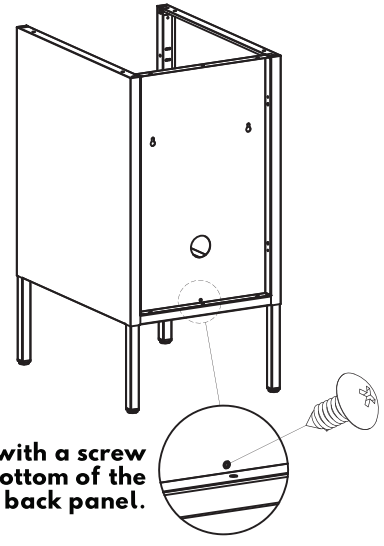



Secure with a screw at the bottom of the back panel.

STEP 6

Place the top panel on the frame and secure with screws from the underside.

J — SCREWS X4

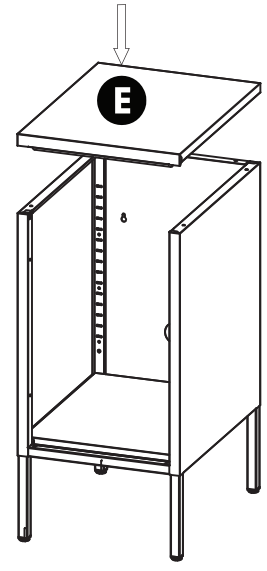

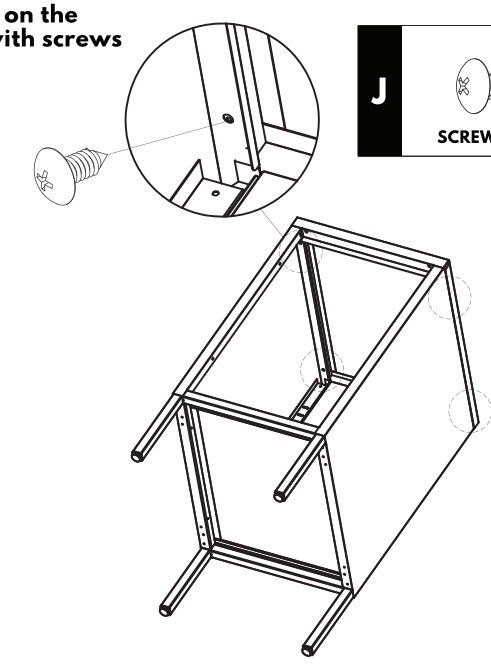


STEP 7

Screw the top panel from the back. Insert the shelf brackets and position them where you want the two shelves.

J — SCREWS X1


K — SHELF BRACKET X8

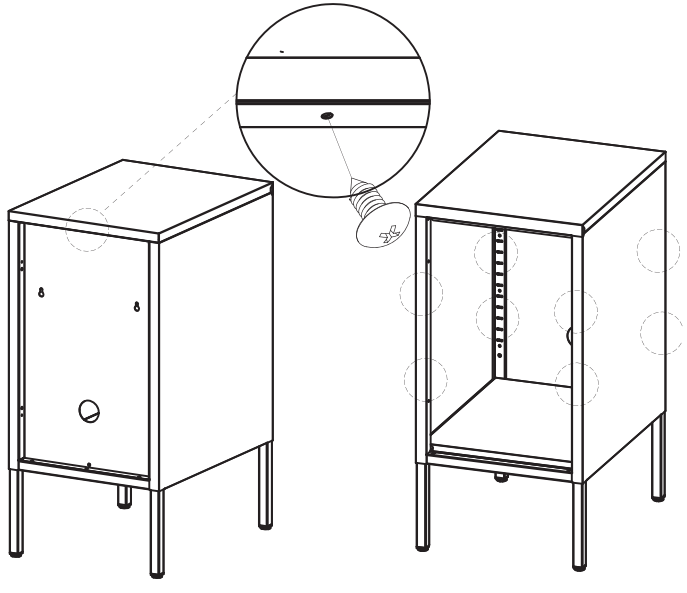




STEP 8

Place the shelves onto the brackets, ensuring they sit securely.

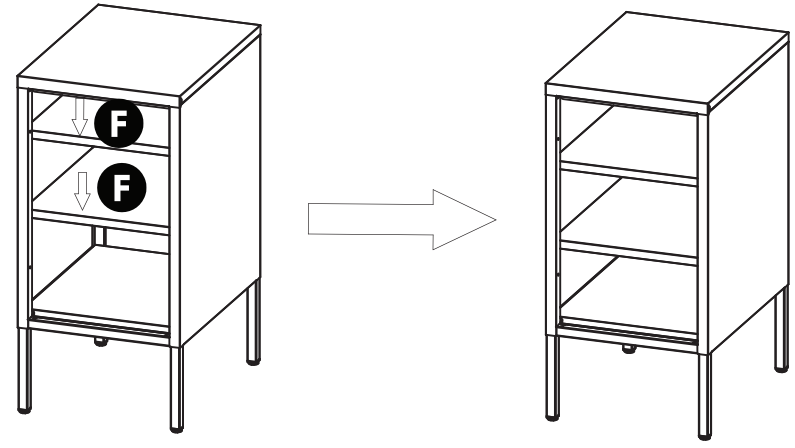

STEP 9


Attach the handle to the door with screws with washer. Insert the magnets and door bumper.

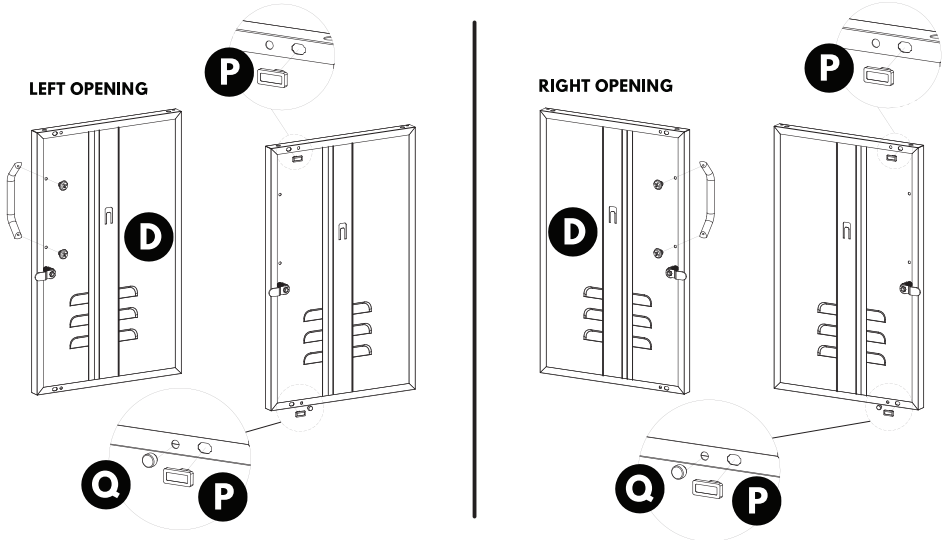

O	N	P	Q
DOOR HANDLE X1	SCREW WITH WASHER X2	MAGNET X2	DOOR BUMPER X1

STEP 10


Insert the door post and large washer into the base of the frame.

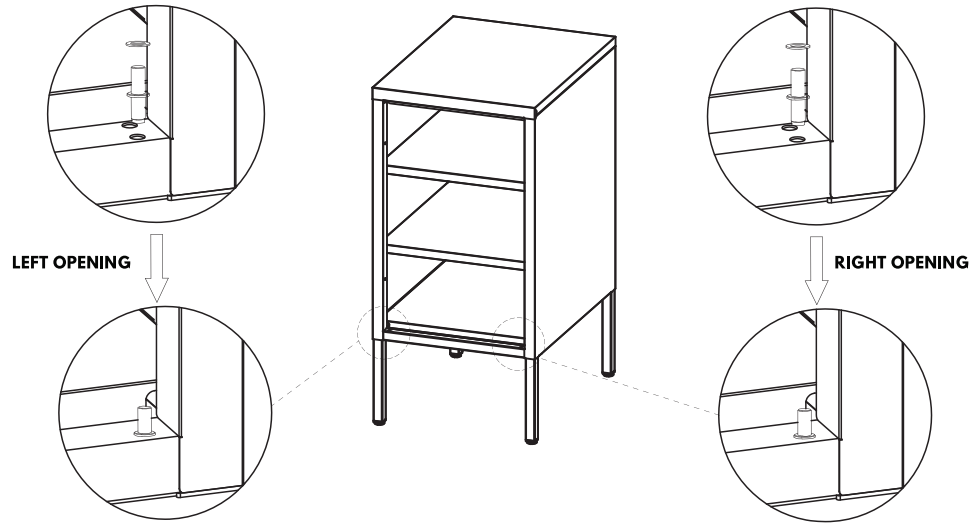

I	L
DOOR POST X1	LARGE WASHER X1

STEP 11

Place bottom of the door onto the post. Push down the pin at the top of the door and slide the door until it clicks into place.

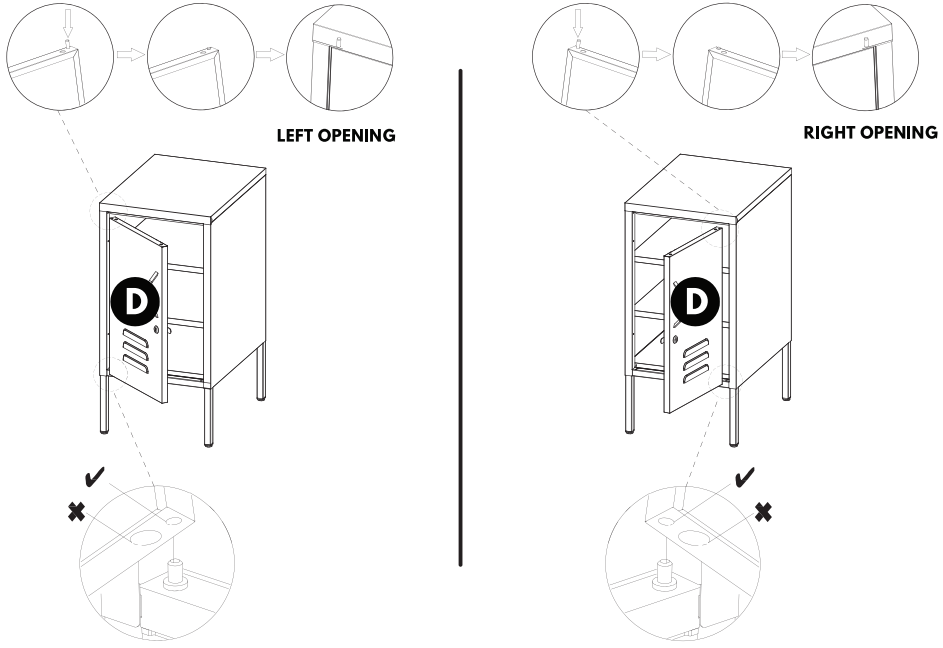

STEP 12

You're done! Enjoy your new cabinet.

