






DESKY® WOODEN FILING CABINET ASSEMBLY INSTRUCTIONS

PARTS

A DRAWER FRAME QTY1 	**B** BOTTOM FRONT QTY1 	**C** TOP FRONT QTY1 	**D** LOCKABLE CASTER WHEEL QTY2 	**E** UNLOCKED CASTER WHEEL QTY2 	**F** FIXED CASTER WHEEL QTY1 	**G** BOLT M6X25 QTY8 
H BOLT M6X15 QTY20 	**I** WASHER QTY20 	**J** C-SCREW QTY2 	**K** LOCK WITH KEY QTY1 	**L** PHILLIPS DRIVER QTY1 	**M** HEX KEY QTY1 	


STEP 1

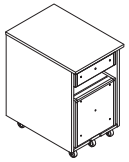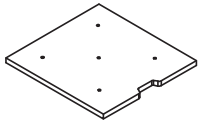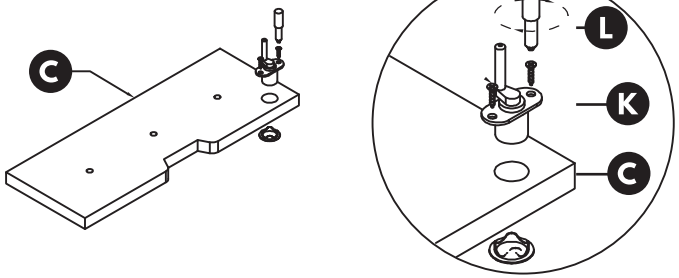


Attach the lock **K** to the top drawer front **C** using a phillips head screw driver or the provided bit **L** and the two wood screws **J**.

STEP 2

Attach the varying caster wheels (see below) to the drawer frame using the hex key **M** and the small bolts with washers **H** + **I**

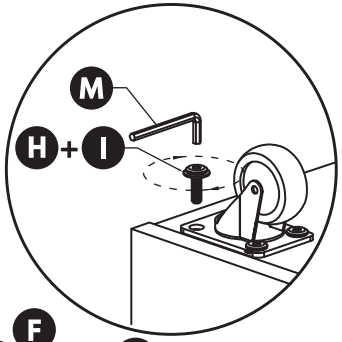

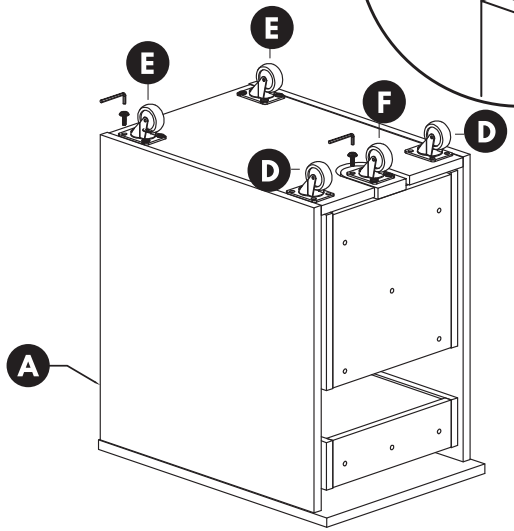

STEP 3

Secure the wooden drawer fronts **B** + **C** using the longer bolts **G** and the provided hex key **M**. Please note to align the panels you may need to loosen, re tighten and align the bolts to get it perfect

