
DESKY®


INTEGRATED CABLE & POWER CHANNEL INSTALLATION INSTRUCTIONS

STEP 1

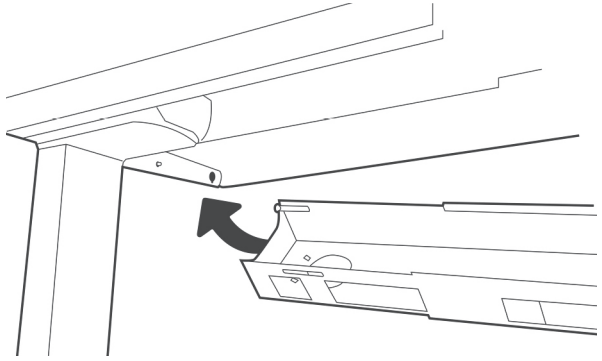


Slide one end of the cable management channel into the side bracket at the back of the Desky.

STEP 2

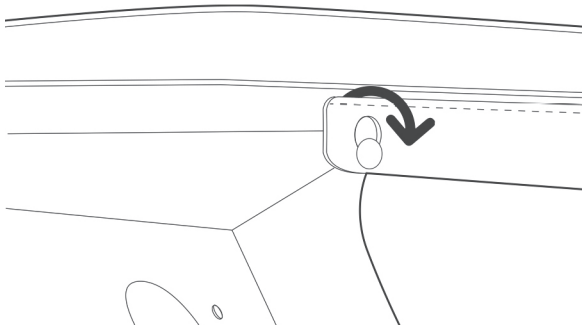


The cable management channel will fit on to the hole provided.

STEP 3

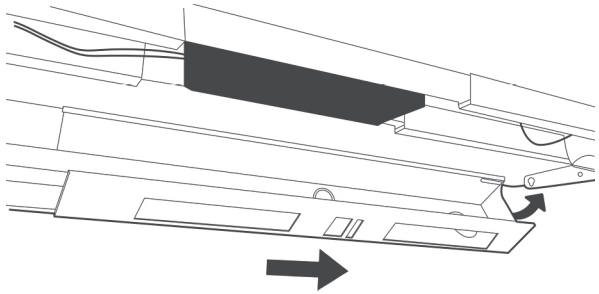


Extend the length of the channel to meet the opposing braket and secure into place.

STEP 4

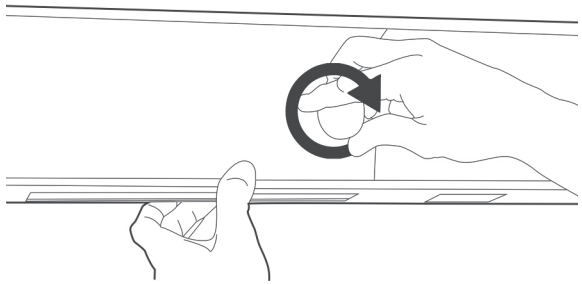


Tighten the centre knob to secure the tray into position. This will ensure that the componet does not move nor slide.

STEP 5

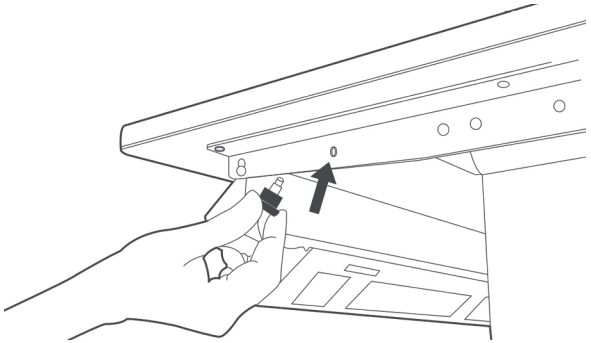

Insert and screw into place the spring loaded release screws into the side bracket (either side).

STEP 6

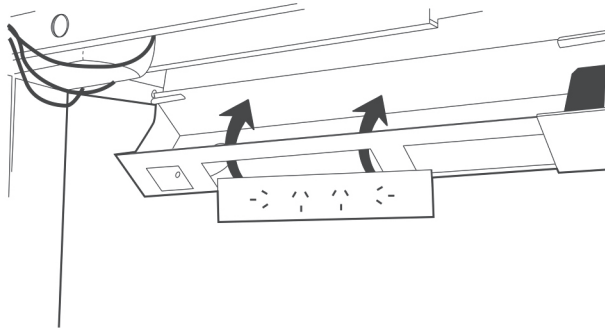

The purpose fit cutouts in the channel fit our powerboards - These click seamlessly into the tray.