

DESKY® MINIMAL UNDER DESK CABINET ASSEMBLY INSTRUCTIONS

PARTS


A **CABINET BODY** QTY 1

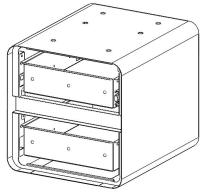


B **FRONT PANELS** QTY 1 PAIR

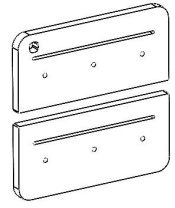

C **MOUNTING BRACKET** QTY 2

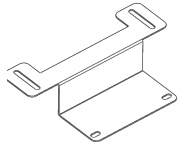


D **LOCKING ROD & NUT SET** QTY 1

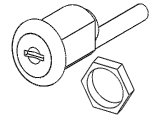

E **M6*12 SCREW** QTY 6



F **M8*12 SCREW** QTY 4




G **ST6*16 SCREW** QTY 4



ASSEMBLY

STEP 1 **Attach the Front Panels to the Drawer.**


E **M6*12 SCREW** X6

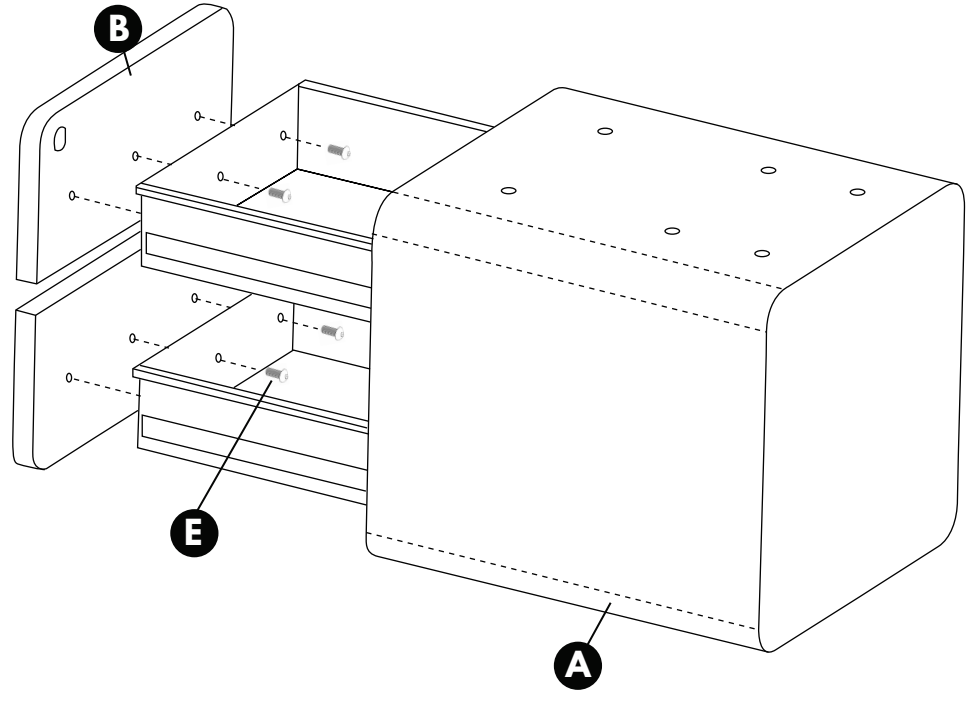


Pull the drawer fully out from cabinet body. A

Secure the front panels B to the front of the drawer using six (6) M6 × 12 screws. E

STEP 2 Installing the Locking Rod.

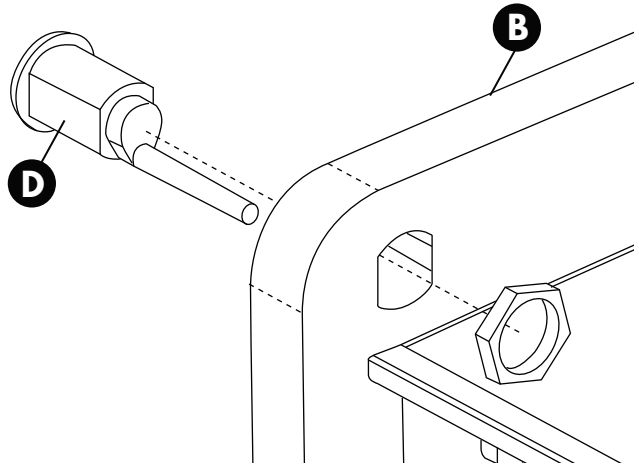

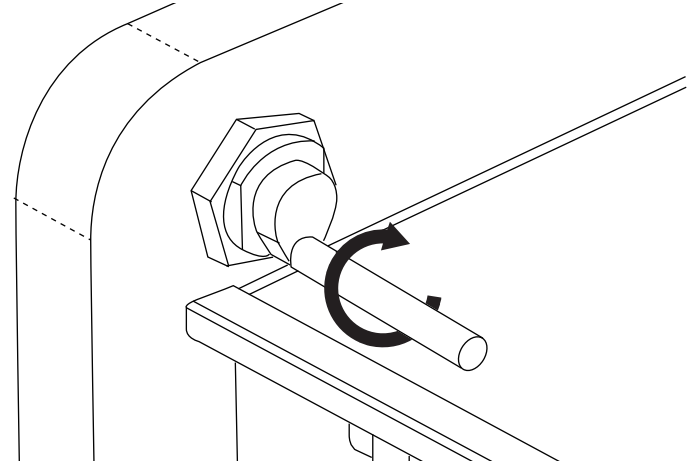

Insert the locking rod (D) downward through the hole in the panel.(B)
From the back side of the panel, secure the rod using the nut provided.

Important:

Ensure the locking rod is installed so it rotates counter-clockwise to engage the lock. Confirm the rod can rotate counter-clockwise freely before tightening fully.

STEP 3 Attach the Mounting Bracket to the Cabinet Body.

F



M8*12 SCREW X4


Secure both mounting brackets (C) to the cabinet body (A) by using four (4) (F) M8 × 20 screws.

STEP 4 Fixing the Minimal Under Desk Cabinet to the desktop.

G



ST6*16 SCREW X4

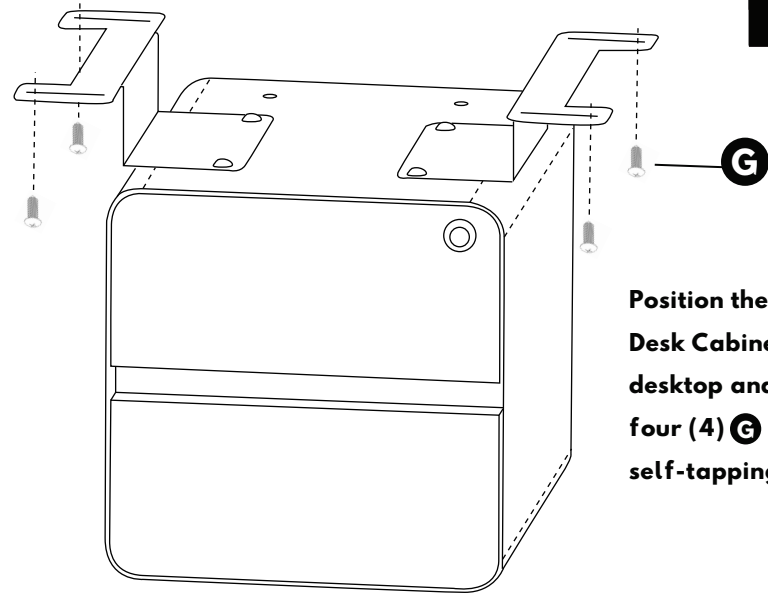

Position the Minimal Under Desk Cabinet beneath the desktop and secure it using four (4) (G) ST6 × 16 self-tapping screws.